



LEAP Desk Converter Installation Instructions



WARNING

Please read these instructions carefully before assembling and using the equipment. Improper installation or use may result in injury or damage.

- If a problem occurs during installation, please contact your local qualified fitter.
- If the accessories are damaged or lost, please report to your supplier.
- Check all cables before use in the event of distortion.
- The factory is not responsible for any damage to the desktop caused by over-loading.
- The factory doesn't take any legal responsibility for product damage caused by self-building, improper installation, over-loading, improper use or day to day wear.
- Please don't use this item for anything other than its designated purpose.

PARTS LIST

Table top



*1

Base



*1

Monitor bracket




*1

Column



*1

Fixed block

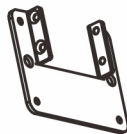

*1

M6*14



*4

M6*8




*4

M6*10




*8

M6*25

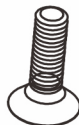

*4

Fixed block

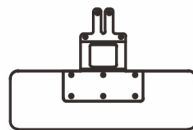

*1

Power Cord

*1

Wrench(4mm)





*1

INSTALLATION STEPS

STEP 1

Connect base and column with 4 screws(M6*14), then plug the control box cord into column connector.

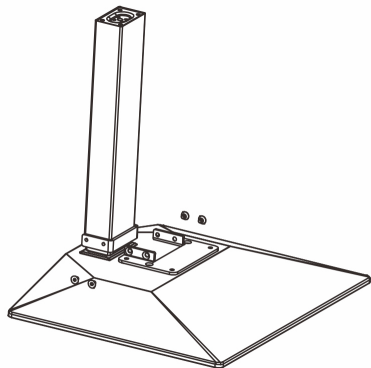
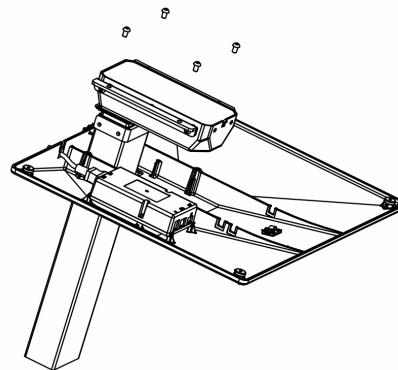


STEP 2

Connect base support block and column with 4 sunk screws(M6*8).

STEP 3

Plug the controller into the control box and raise the shelf a small bit. Install the table top with 4 sunk screws (M6*25).

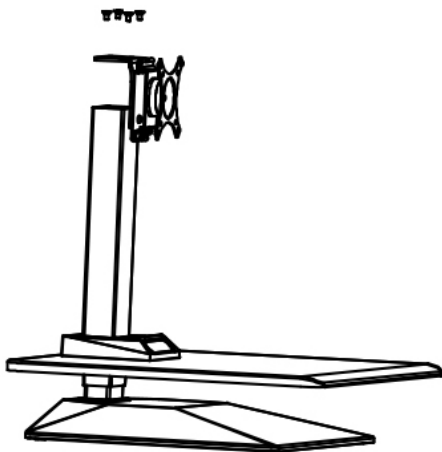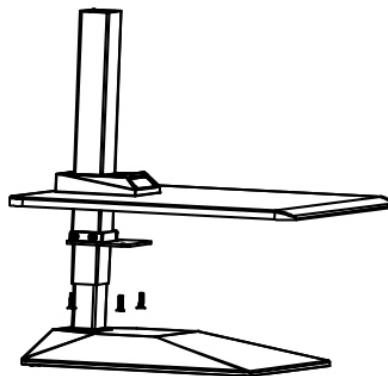


STEP 4


Install monitor bracket support with 4 sunk screws (M6*12).

STEP 5

Set-Up of desk converter is complete

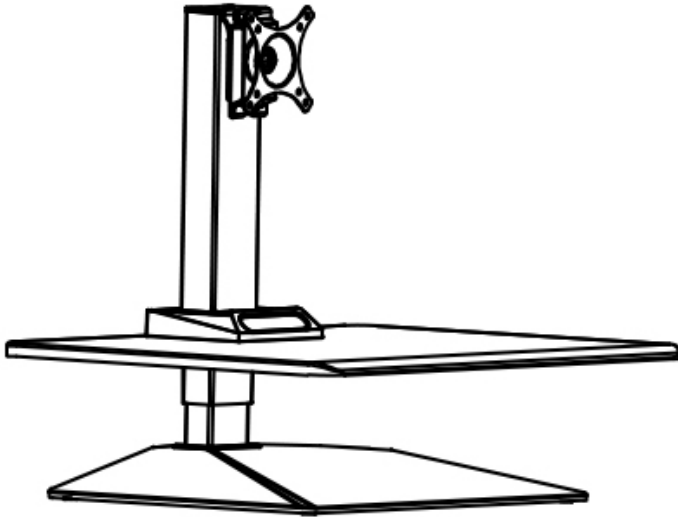

BUTTON INSTRUCTION

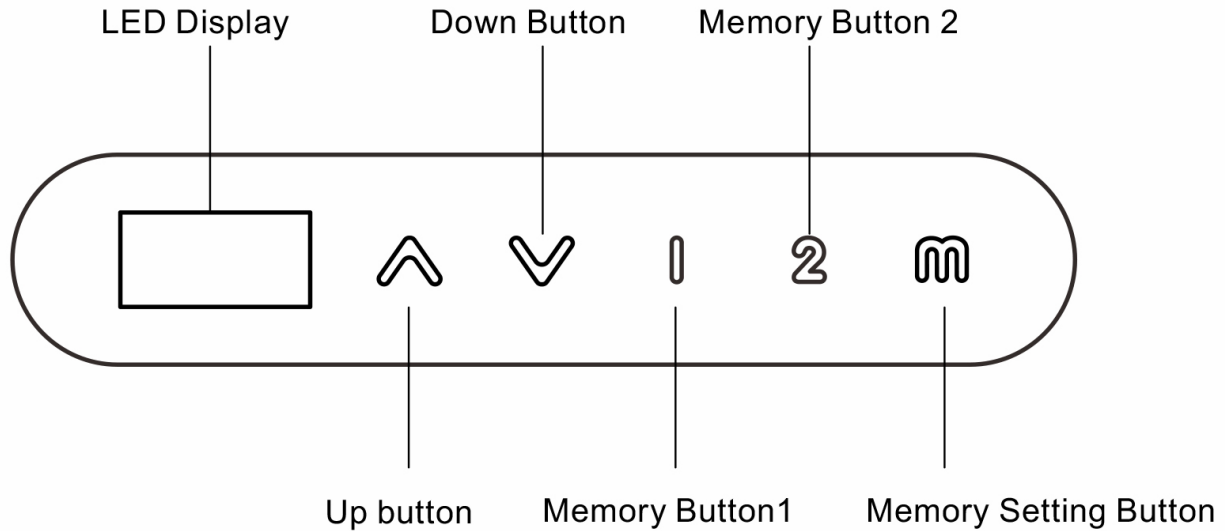

Combination Button

Press “M” button first, then press “1” or “2” to memorise the current height.

TROUBLE SHOOTING

LED flashing 'RST' – System should be reset

1. Ensure all the power cords, connecting cables and handset cord are connected correctly
2. Press 'V', the actuators will move down to the lowest position
3. Press 'V' again and hold until 'RST' flashes on the LED
4. Press 'V' again – the actuators will go down by roughly 7mm, and go back up
5. Your reset is now complete, and your convertor is ready to use



LED displays E01 - Overcurrent protection.



Operation:

1. Press any button, LED will display "RST".
2. Reset.

LED displays E07 - Abnormal Height Limit.



Operation:

1. Press any button, LED will display "RST".
2. Reset.

LED displays H01 - Overheating/Work protection.



Operation:

Rest for 18 minutes first, and then operate. (In case of an emergency, power off the desk converter and then power on again. Product will now work as normal)