CDT2



EPH CONTROLS

Room Thermostat

Installation and Operation Gui

Visit Plumb2u

See product

Table of contents

Installation Instructions

Factory Default Settings 2
Specifications 3
LCD Display 4
Buttons 5
Wiring 6
Mounting & installation 7

Operating Instructions

On / Off Function 11
Adjusting the Target Temperature 11
Locking the Keypad 12
Backlight 12
Menu
HYS Hysteresis HOn and HOFF 13
Calibrate 14
Setting High and Low limits 15
Operating Mode 16
Normal Mode (Nor 17
Delay Start Control (On/Off) 18
Time Proportional Inte 20
Resetting the Thermostat 23

Visit Plumb2u
See product



Mains operated non-programmable Room Thermostat

Visit Plumb2u

Installation Instructions

See product

Factory Default Settings

High and Low Temp. limitation:	Off
Keypad lock:	Off
Operating mode:	Normal
Temperature indicator:	˚C
Frost protection:	On (5˚C)
HYS On:	0.4˚C
HYS OFF:	0.0˚C

Note:

Frost protection is built into this thermostat.

It will only be activated when the thermostat is in OFF position and the temperature reaches 5˚C.

Visit Plumb2u

See product

Specifications


Contacts:	Volt Free
Power supply / Input:	230VAC
Power consumption:	1.1W
Temperature range:	5 … 35˚C
Ambient temperature:	0 … 45˚C
Ambient admissible humidity:	5-95%RH
Contact rating:	7(3)A 230VAC
Switch output:	SPDT Volt Free
Dimensions:	91 x 91 x 26mm
Internal temperature sensor:	NTC 100K
Backlight:	White
IP rating:	IP20
Pollution degree:	2
Hysteresis (Switching differential):	Adjust 0.1°C increments
Automatic action:	1C

Visit Plumb2u

See product

LCD Display

[1] Displays when setting target temperature.
[2] Displays room temperature title.
[3] Displays current / target temperature.
[4] Displays when changing mode setting.
[5] Displays when setting in TPI mode.
[6] Displays when the thermostat is calling for heat.
[7] Displays when keypad is locked.
[8] Displays when thermostat is in the OFF mode.
[9] Displays when setting HIGH and LOW temperature limit.
[10] Displays during calibration mode.
[11] Displays when setting hysteresis.

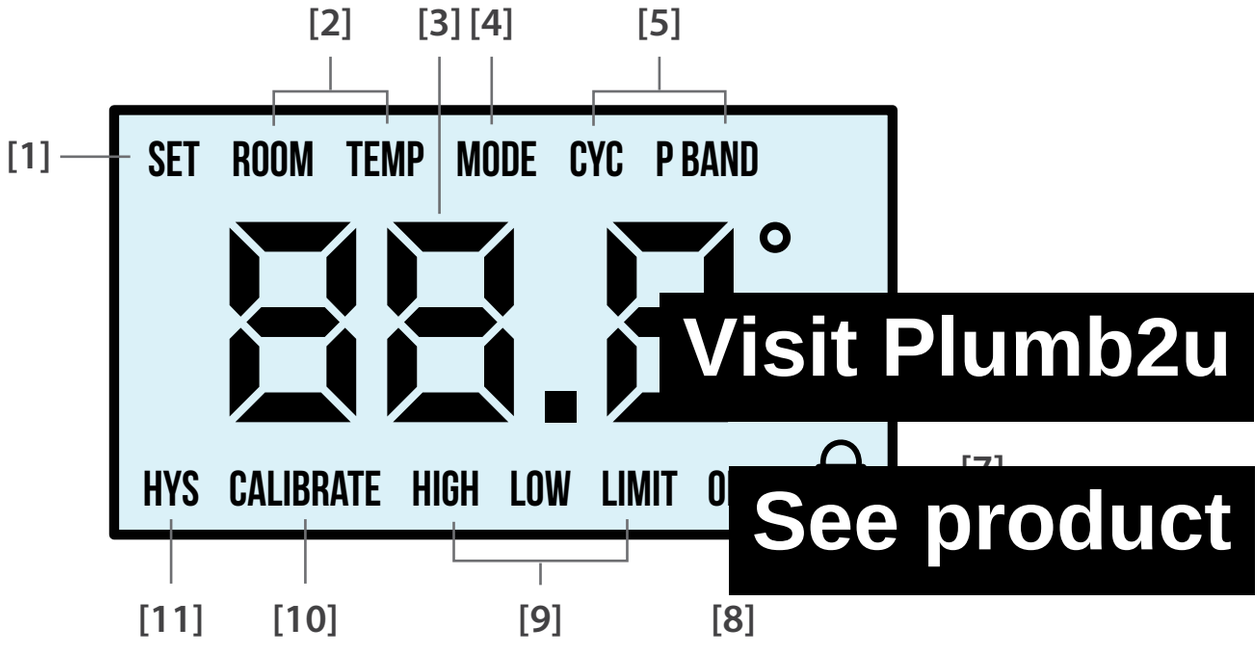

Visit Plumb2u
See product

Buttons



Reset Button

Standby Button

Down Button

Up B


OK Button

OK

Visit Plumb2u

See product

Wiring

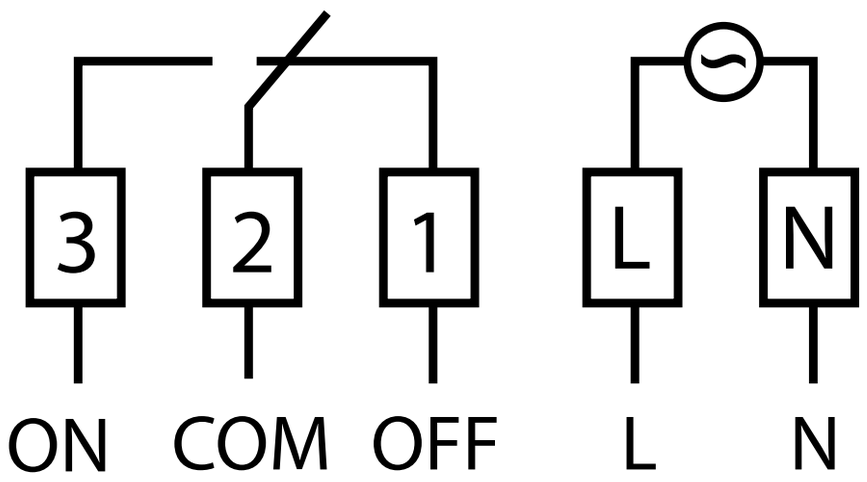

Terminal Connections

N	Neutral In
L	Live In
Terminal 1	OFF - N/C Normally closed connection
Terminal 2	COM - Common conn
Terminal 3	ON - N/O Normally open connection

Visit Plumb2u
See product

Mounting & Installation

Caution!

- Installation and connection should only be carried out by a qualified person.
- Only qualified electricians or authorised service staff are permitted to open the thermostat.
- If the thermostat is used in a way not specified by the manufacturer, its safety may be impaired.
- Prior to setting the thermostat, it is necessary to complete all required settings described in this section.
- Before commencing installation, the thermostat must be first disconnected from the mains.

This thermostat can be mounted in the following ways:

1) **Directly mounted on wall**
2) **To a recessed conduit box**
3) **To a surface mounting box**

Visit Plumb2u

See product

Mounting & Installation Continued

1) Remove the thermostat from its packaging.

2) Choose a mounting location so that the thermostat can measure the room temperature as accurately as possible.
   - Mount the thermostat 1.5 metres above the floor level.
   - Prevent direct exposure to sunlight or other heating / cooling sources.

3) Use a philips screwdriver to loosen the screw on the bottom of the thermostat to open the front housing.

4) Wire the thermostat according to the wiring diagram on page 6.


5) Screw the backplate onto a back box or directly to the surface.

6) Close the front housing and tighten the screw on the bottom of the thermostat.


Visit Plumb2u

See product


1

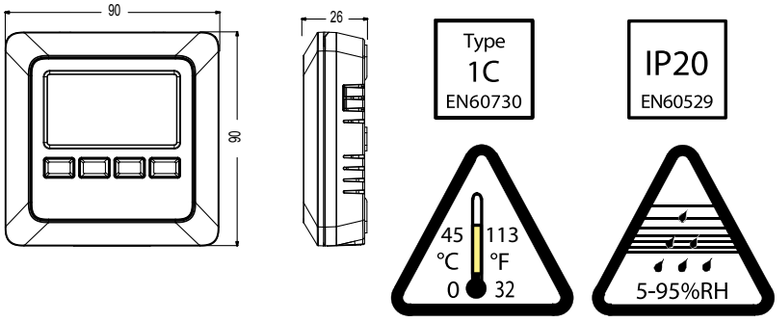


2

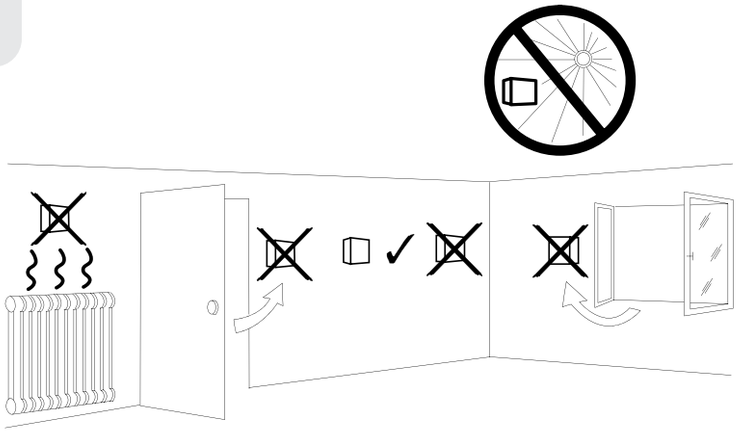


3

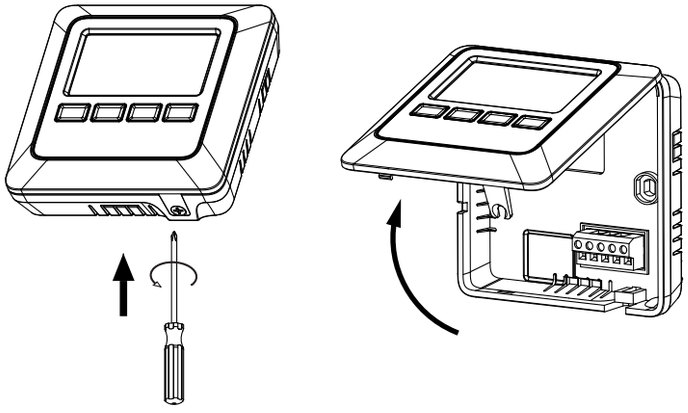


4

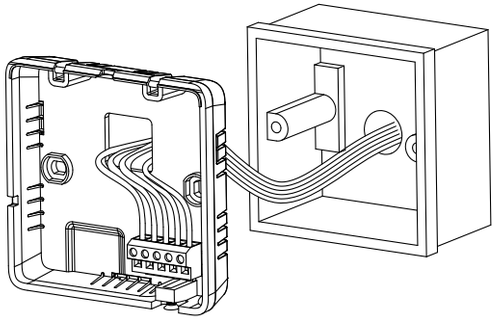

5

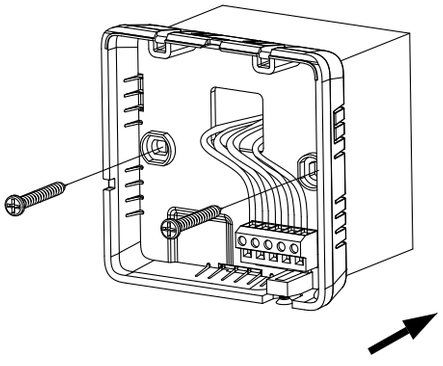

6

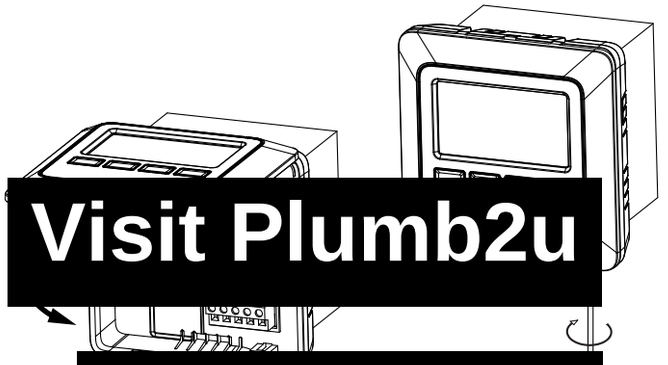

Visit Plumb2u

See product



Mains operated non-programmable Room Thermostat

Visit Plumb2u

Operating Instructions

See product

On / Off Function

Press [⏻] to turn the thermostat On or Off.

When in the ON mode the thermostat will display the current room temperature.

When in the OFF mode the thermostat will display the current room temperature and the word '**OFF**'.

Adjusting the Target Temperature

Press [^] to increase the target temperature from 5-35˚C.

Press [OK] or wait 5 seconds. The target temperature is now saved.

Press [v] to decrease the target temperature from 5-35˚C.

Press [OK] or wait 5 seconds. The target temperature is now saved.

Visit Plumb2u

See product

Locking the Keypad

To lock the thermostat, press and hold ⌄ and ⌃ for 10 seconds.

🔒 will appear on the screen. The buttons are now disabled.

To unlock the thermostat, press and hold ⌄ and ⌃ for 10 seconds.

🔒 will disappear from the screen. The buttons are now enabled.

Backlight  AUTO

There are three settings for selection.

'AUt' The backlight is on for 5 seconds when any button is pressed.

'OFF' The backlight is permanently off.

'ON' The backlight is permanently on.

To adjust the backlight setting, press and hold OK for 10 seconds.

'AUt' appears on the screen.

Use ⌄ and ⌃ to change the mode between AUTO, ON and OFF.

Press OK to confirm selection and to return

Visit Plumb2u
See product

Menu

This menu allows the user to adjust additional functions.

To access the menu, press & hold ⏻ and OK together for 5 seconds.

HYS – Hysteresis HOn and HOFF  HOn 0.4°C HOff 0°C

This menu allows the installer to change the switching differential of the thermostat when the temperature is rising and falling.

If '**HYS ON**' is set at 0.4˚C and the setpoint is 20˚C, then the thermostat will switch on when the temperature drops below 19.6˚C.

If '**HYS OFF**' is set at 0.2˚C and the setpoint is 20˚C, then the thermostat will switch off when the temperature reaches 20.2˚C.

To access this setting press and hold ⏻ and OK together for 5 seconds. '**HYS**' will appear on the screen. Press OK to select.

'**HOn**' will appear on the screen. Press OK and temperature will begin to flash. Use ⌄ and ⌃ to select the '**HO**[illegible] .

'**HOFF**' appears on the screen. Press OK and the temperature will begin to flash. Use ⌄ and ⌃ to select the [illegible]ress OK . Press ⏻ to return to normal operation.

Visit Plumb2u
See product

Calibrate

This menu allows the installer to calibrate the temperature of the thermostat.

To access this setting press and hold ⏻ and OK together for 5 seconds. '**HYS**' will appear on the screen.

Press ^ until '**CALIBRATE**' flashes on the screen.

Press OK to select.

The actual temperature will flash on the screen.

Press v and ^ to calibrate the temperature.

Press OK to confirm the temperature.

Press ⏻ to return to normal operation.

Visit Plumb2u

See product

Setting High and Low limits Hi 35°C Lo 5°C

This menu allows the installer to change the minimum and maximum temperatures that the thermostat can be set at.

To access this setting press and hold ⏻ and OK together for 5 seconds.

'**HYS**' will appear on the screen. Press ^ until '**LIMIT**' flashes on the screen. Press OK to select.

'**HIGH LIMIT**' will appear on the screen, the temperature will begin to flash.

Use v and ^ to select the high limit for the thermostat.

Press OK to confirm.

'**LOW LIMIT**' will appear on the screen, the temperature will begin to flash.

Use v and ^ to select the low limit for the thermostat.

Press OK to confirm.

Press ⏻ to return to normal operation.

'**LIMIT**' will appear on the screen.

Visit Plumb2u

See product

Operating Mode (Normal  / Delay Start / TPI)

There are three settings for selection, Normal, Delay Start or TPI mode. The default setting is Normal.

Press and hold ⏻ and OK together for 5 seconds.

'**HYS**' will appear on the screen.

Press ^ until '**MODE**' appears on the screen.

Press OK to select.

Use v and ^ to select between:

nOr (Normal mode)

dS (delay start mode)

tPi (Time proportional integral mode)

Press OK to confirm the mode.

Visit Plumb2u


See product

Nor (Normal Mode)

When the temperature falls below the target temperature, 🔥 will appear and the thermostat will activate the demand for heat.

When the temperature rises above the target temperature, 🔥 will disappear, and the thermostat will cancel the demand for heat.

Graph (17.1): On / Off Control

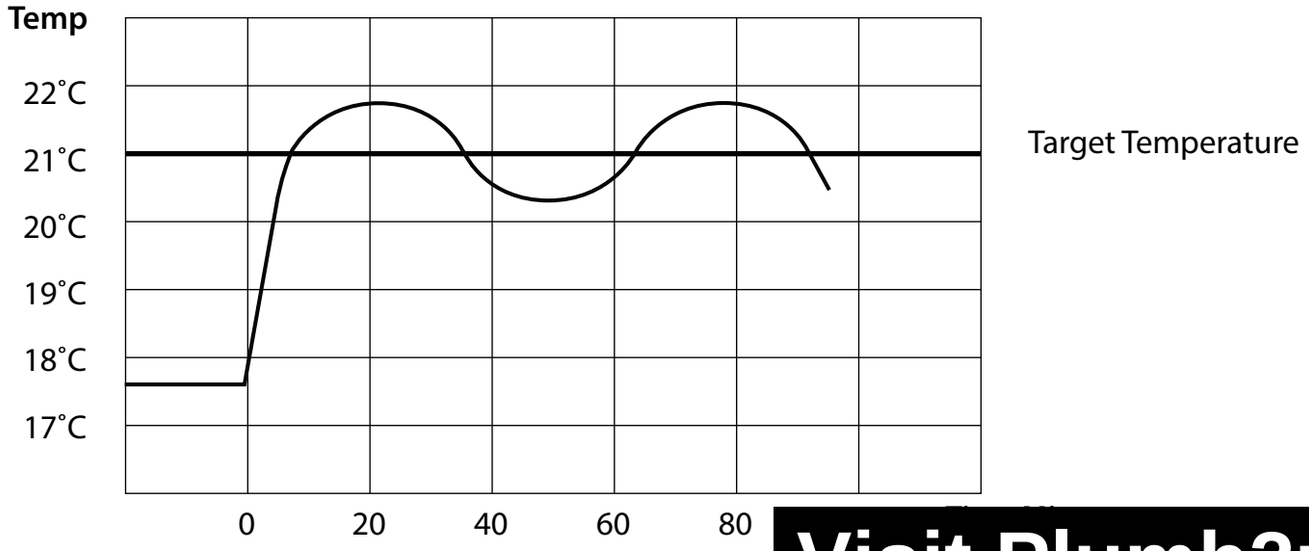

Visit Plumb2u

See product

Operating Mode (Normal / Delay Start / TPI) continued


Delay Start Control (On/Off)

When in this mode the thermostat is delayed by a variable time depending on the current temperature, target temperature and also the fall in temperature from when the delay start has activated.

The 🔥 will flash until the thermostat activates.

When activated the thermostat will allow the heating system time to reach the target and delay start will remain inactive until it reaches this target.

Graph (18.1): Delay Start Control

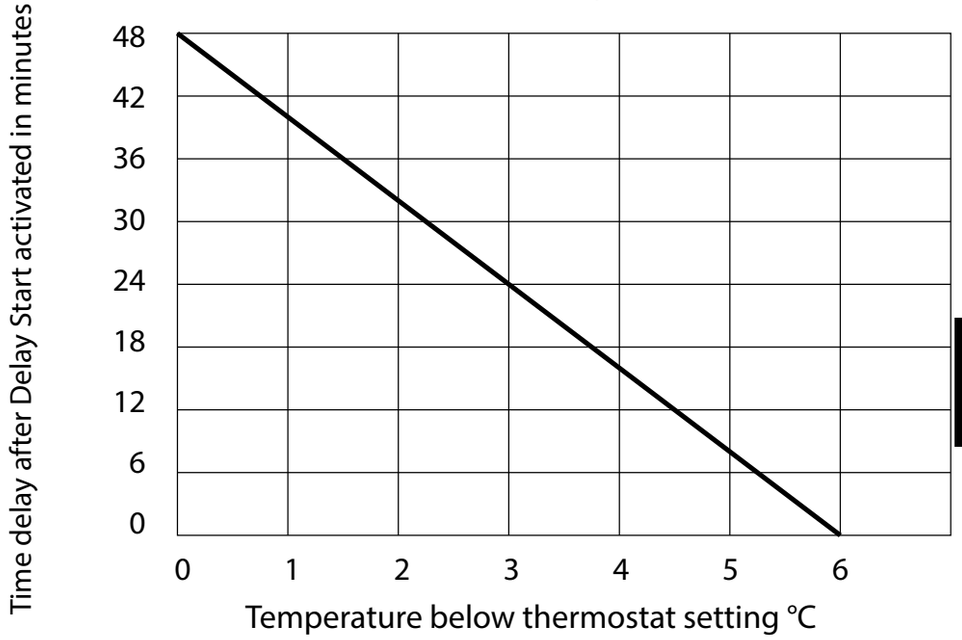

E.g: If the temperature is 6˚C below the thermostat target, the thermostat will call for heat immediately.

C

thermostat will not call for

Visit Plumb2u

See product

Delay start can be reactivated by:

1. Press [∨] to lower the target below the current temperature.
2. Press [OK] to confirm.
3. Press [∧] to increase the target temperature above the zone temperature within 6°C .
4. Press [OK] to confirm.

The heating will be delayed as per the graph on page 18.

If the difference between the actual temperature and the target is 1°C the thermostat will delay starting for circa 40 minutes.

If the difference between the actual temperature and the target is 3°C the thermostat will delay starting for circa 24 minutes.

If the difference is 6°C or more then the thermostat will be switched on immediately.

The time delay will change if the temp
original calculation.

Visit Plumb2u

See product

Operating Mode (Normal / Delay Start / TPI) continued

Time Proportional Integral Mode (TPI)

When the thermostat is in TPI mode and the temperature is rising in the zone and falls into the Proportional Bandwith section, TPI will start to affect the thermostats operation. The thermostat will turn on and off as it gains heat so that it doesn't overshoot the target by too much. It will also turn on if the temperature is falling so it doesn't undershoot the target which will leave the user with a more comfortable level of heat.

There are 2 settings that will affect the thermostats operation

1. The number of heating cycles per hour
2. The Proportional Bandwith

CyC – Number of Heating Cycles per hour 6 Cycles

This value will decide how often the thermostat will cycle the heating on and off when trying to achi ture. You can select 2/3/6 or 12.


Visit Plumb2u

See product

Pb -Proportional Bandwith 2°C

This value refers to the temperature below the target at which the thermostat will start to operate in TPI control. You can set this temperature from 1.5°C to 3.0°C in 0.1°C increments.

Graph (21.1): TPI Control

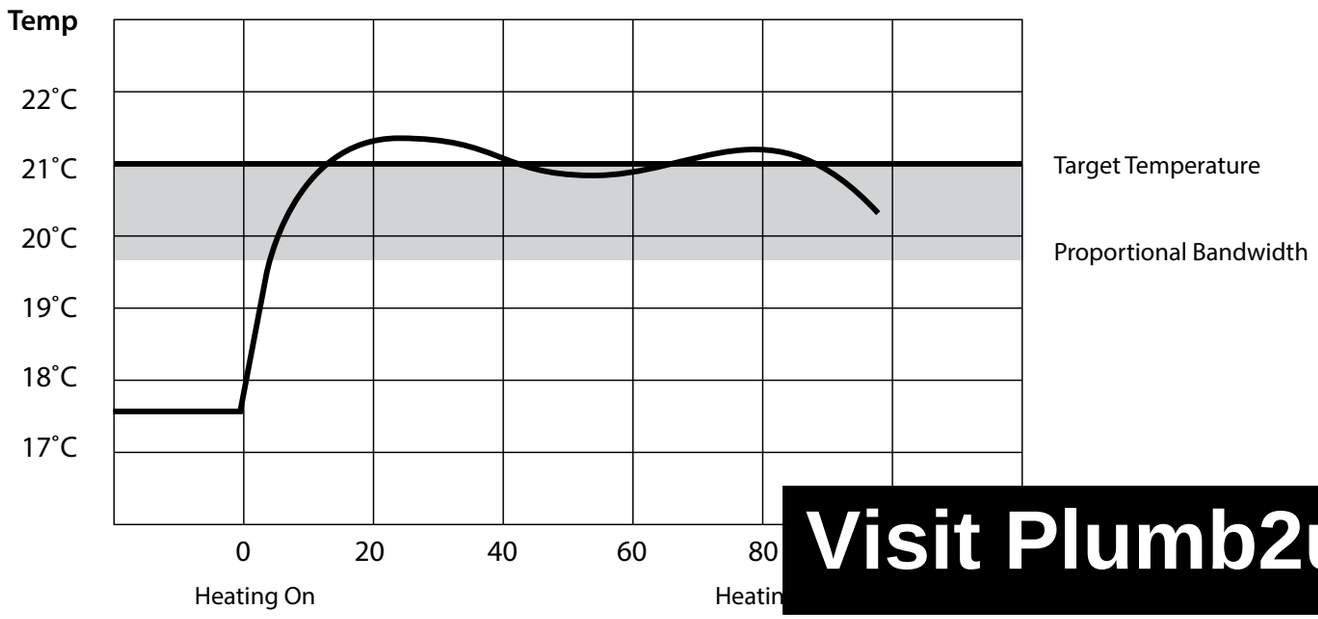

Visit Plumb2u

See product

Operating Mode(Normal  / Delay Start / TPI) continued

Time Proportional Integral Mode (TPI) Continued

Once TPI mode is selected, '**CYC**' and '**06**' will appear on the screen.

Use ⌄ and ⌃ to select from 2,3,6 or 12.

Press OK to confirm.

'**P Band**' and '**2.0**' will appear on the screen.

Use ⌄ and ⌃ to select from 1.5 to 3.0.

Press OK to confirm.

Press ⏻ to return to normal operation.

Visit Plumb2u

See product

Resetting the Thermostat

To reset the thermostat to factory settings, locate the ▭ reset button on the left hand side of the thermostat.

Press the ▭ reset button and release it.

'**NO**' will flash on the screen.

Press [^].

'**YES**' will flash on the screen.

Press [OK] to confirm.

The thermostat will restart and revert to its factory settings.

Visit Plumb2u

See product

Notes

Visit Plumb2u

See product

Notes

Visit Plumb2u

See product

EPH Controls IE

technical@ephcontrols.com

www.ephcontrols.com/contact-us

+353 21 471 8440

Cork, T12 W665

EPH Controls UK

technical@ephcontrols.co.uk

www.ephcontrols.co.uk/contact-us

+44 1933 322 072

Harrow, HA1 1BD

Visit Plumb2u

See product

© 2024 EPH Controls Ltd.
2024-04-30_CDT2_DS_PK