

**eTRV** 



## Smart Radiator Thermostat Installation & Operation Guide

Visit [Plumb2u](https://www.plumb2u.com)

**EP** See product  
CONTR

# Table of contents

<b>Installation Instructions</b>	
Factory Default Settings	5
Specifications	5
Important Notes	6
How your eTRV works	7
Mounting & Installation	8
<b>Operating Instructions</b>	
LCD Symbol Description	11
Button Description	12
Replacing the Batteries	13
Error Codes	14
Boost Function	15
Locking and unlocking the eTRV	15
Changing the Mode	16
Adjusting the Target Temperature	16
Connecting an eTRV to the RF16 Controller	17
Disconnecting an eTRV from the RF16 Controller	19
Open Window Function	21

**Visit Plumb2u**

**See product**

## Operating Instructions Continued

### Menu

P1 CAL - Calibrate	22
P2 Hi & Lo - Setting high & low limits	23
P3 rSt - Resetting the eTRV	24
P4 bL - Backlight - Auto	25
P5 InS - Installation Direction	26
P6 HOn - Hysteresis	27

[Visit Plumb2u](#)

[See product](#)



Smart Radiator Thermostat  
Installation Instructions

[Visit Plumb2u](#)

[See product](#)

## Factory Default Settings



Keypad lock:	Off
Installation position:	Vertical
Hon:	0.4°C
Hoff:	0.0°C
Boost temperature:	21°C

## Specifications

Power supply:	2 x AA Li-FeS <sub>2</sub> Batteries
Standby current:	<50uA
Battery replacement:	240 days approx.*
Temp. control range:	5...35°C
Dimensions:	80 x 52mm
Temperature sensor:	NTC 100K Ohm @ 25°C
Temperature indication:	°C
Ambient temperature:	0...45°C
Ambient admissible humidity:	5-95% RH
Backlight:	White
IP rating:	IP20

Hysteresis (Switching differential) 0.2°C

\* Based on average estimated usage

Li-FeS<sub>2</sub> (Lithium Iron) batteries available

**Visit Plumb2u**

**See product**

5.com

## Important Notes

It is extremely important to use good quality batteries in the eTRV to ensure correct operation of the product. EPH recommend using Li-FeS<sub>2</sub> (Lithium Iron) batteries. If poor quality batteries are used, they may cause the product to stop communicating wirelessly, fail to communicate information correctly and stop opening or closing.

Low power or discount store battery brands should not be used. When the battery is low a battery low notification will appear on the eTRV, it will also display on the EMBER app. The batteries should be changed immediately. Normally the eTRV will stop operating soon after this notification. When the eTRV shows a fault E4 – the motor is not operating correctly, this is normally due to a battery issue – possibly one or both of the batteries are not providing adequate power.

The eTRV detects temperature and communicates on cycles every 4 minutes to conserve battery power.



When buttons are pressed on the eTRV it will save these changes but may not communicate immediately to the RF16 controller. It will communicate at the next communication cycle.

The eTRV is designed for use with **See product** s.


**Visit Plumb2u**

## How your eTRV works

The eTRV is designed to control and operate a radiator valve wirelessly. When the eTRV is calling for heat, it will communicate wirelessly to the RF16 controller which will activate your heating system to heat the radiator. When the eTRV reaches its defined setpoint temperature it will close the radiator valve and stop calling for heat.

The temperature setpoint is defined by the program settings on your RF16 controller, via the EMBER app or by using the  and  buttons on the eTRV.

If the room temperature is lower than the target temperature then the eTRV will open the radiator valve and request the heating system to activate, if the room temperature is higher than the set temperature it will close the radiator valve and signal the system to stop calling for heat.

When calling for heat your eTRV will show a flame symbol  on the screen. This will disappear when the temperature setpoint has been achieved.

When the eTRV is in MANUAL mode the screen will display the current room temperature. In OFF mode the screen will display the word 'OFF'.

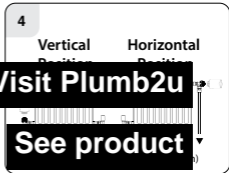
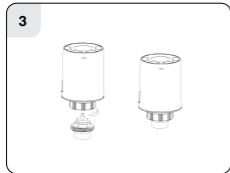
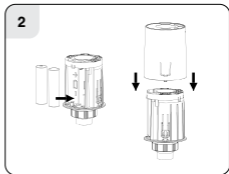
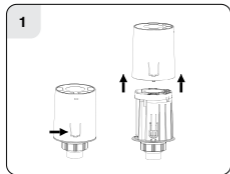
[Visit Plumb2u](#)

[See product](#)

# Mounting & Installation

## Caution!

- Ensure the eTRV is positioned in an area that has good air flow so it can detect temperature effectively.
- Ensure the eTRV is out of direct sunlight.
- If the eTRV or RF16 are used in a way not specified by the manufacturer, its safety may be impaired.
- Prior to setting the eTRV, it is necessary to complete all required settings described in the mounting & installation section.
- Ensure the valve body is free of dust and debris.
- Ensure the valve body is dry and not leaking.



- 1) Press and hold the release mechanism on the side of the eTRV, while holding pull the cover up and it will slide off the eTRV.
- 2) Insert the 2 x AA batteries and replace the cover.  
Pair the eTRV to the RF16. *(see page 18)*
  - Mark the eTRV zone by using the stickers provided.
  - Note the room name on the 16 zone list provided, this will help the user of the system identify the zones if it's needed in future.
- 3) The eTRV can be mounted to a radiator valve with a M30 x 1.5mm thread. Rotate the ring at the base of the eTRV so it threads onto the radiator valve until it's tight. It will automatically adapt its stroke to that of the valve.

It's recommended that the eTRV is opened to make it easier to mount, this is done by calling for heat on the RF16 or eTRV and it will retract the spindle.

- 4) Position the eTRV on the radiator valve so the screen is orientated correctly.

**Visit Plumb2u**

**Note:**

The eTRV is designed for use **See product** dies.

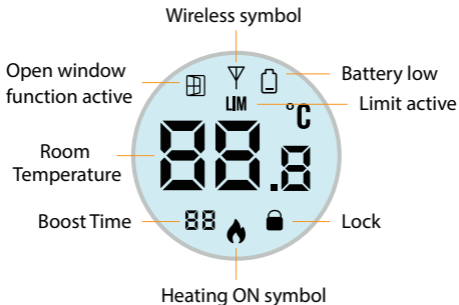


## Smart Radiator Thermostat Operating Instructions

[Visit Plumb2u](#)

[See product](#)

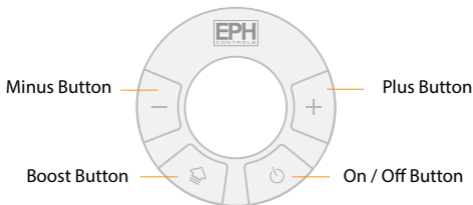
## LCD Symbol Description





[Visit Plumb2u](#)

[See product](#)



## Button Description





### Shortcuts

Hold  and  for 10 seconds for keypad lock.

Hold  and  for 5 seconds to access the menu.

Hold  and  for 5 seconds

Hold  and  for 5 seconds

**Visit Plumb2u**

**See product**

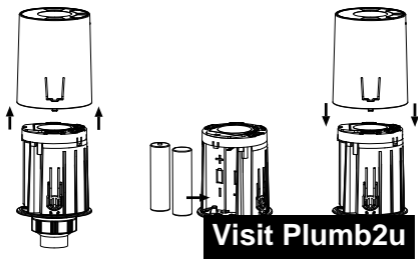
action.

## Replacing the Batteries

Press and hold the release mechanism on the side of the eTRV, while holding pull the cover up and it will slide off the eTRV.

Remove and replace the 2 x AA batteries. It is extremely important to use good quality batteries in the eTRV to ensure correct operation of the product.

Slide the cover back on to the eTRV and it will return to it's normal operation.



Li-FeS<sub>2</sub> (Lithium Iron) batteries available [plumb2u.com](https://www.plumb2u.com)

**See product**

## Error Codes


The eTRV will display error codes if there is a problem.

### 1) E4

Motor Issue – Check Batteries

If E4 still shows after premium batteries are used, the eTRV needs to be replaced.

### 2) Battery Low Indication


When the batteries are low on the eTRV, the screen will show a low battery icon , this will also show on the zone in the EMBER App. When this appears on the screen it is recommended to change the batteries immediately. *(see page 6)*



[Visit Plumb2u](#)

[See product](#)

## Boost Function

The eTRV can be boosted to a specific temperature for 30 minutes, 1, 2 or 3 hours.

Press  once for 30 minutes,  
twice for 1 hour,  
three times for 2 hours or  
four times for 3 hours.

Then press  or  to set the desired temperature for the boost period.



30, 1, 2 or 3 will appear on the screen,


Wait 5 seconds for the eTRV to return to the home screen.

To cancel a boost, press  when boost is active.



## Locking and unlocking the eTRV


### To lock the eTRV

Press and hold  and  for 10 seconds.

 will appear on the screen. The buttons are now disabled.

### To unlock the eTRV


Press and hold  and  for 10 seconds.

 will disappear. The buttons are

**Visit Plumb2u**

**See product**

## Changing the Mode



Press  to change between AUTO, MANUAL and OFF modes.


AUT - Auto

OFF - OFF

On - Manual

## Adjusting the Target Temperature

Press  or  to decrease or increase the target temperature.

Press  or wait 5 seconds.

The target temperature is now saved.

### Temporary Override

If the eTRV temperature is changed when in the Auto mode it will apply a temporary change to the current program and will revert to the programmed settings at the next program time.

### Permanent Override


If the eTRV temperature is changed when in the Manual mode, it will change the target temperature.

**Visit Plumb2u**

**See product**

## Connecting an eTRV to the RF16 Controller


### On the RF16:


Press .

'P01 rF Cn' will appear on the screen.

Press  to confirm.

'01' will appear on the screen.

Rotate  to the required zone.

Press  to select that zone.

'CONNECT' will appear flashing on the screen.



**Note:** When selecting a zone to pair, zones that are flashing are available while zones that are solid have already been paired.

[Visit Plumb2u](#)

[See product](#)

## Connecting an eTRV to the RF16 Controller continued

### On the eTRV:

Press and hold  and  for 5 seconds.



'**nOE**' will appear on the screen followed by ' - - '


The eTRV will display '**r**' followed by the **zone number**.

Press  to exit from screen.

### On the RF16:

'**CONNECTED**' will appear solid on the screen when the eTRV is successfully paired.

Rotate  to pair the next available zone and repeat the process or press  to exit.

Press  to return to normal operation at anytime.


[Visit Plumb2u](#)

[See product](#)


# Disconnecting an eTRV from the RF16 Controller

To Disconnect all zones:

On the RF16:

Press  on the RF16.

'P01 rF Cn' will appear on the screen.

Rotate  clockwise until 'P06 rF dn' appears on the screen.

Press  to confirm.

'ALL' will be flashing.

Press  to select ALL.

'nO' will appear on the screen.

Rotate  clockwise.

'YES' will appear on the screen.

Press  to confirm disconnection.

(This allows you to disconnect [Visit Plumb2u](#) (ce)

[See product](#)

## Disconnecting an eTRV from the RF16 Controller continued

### To Disconnect an individual zone:

#### On the RF16:

Press  on the RF16.

'P01 rF Cn' will appear on the screen.

Rotate  clockwise until 'P06 & rF dn' appears on the screen.

Press  to confirm.

'All' will be flashing.

Rotate  to select an individual zone.

Press  to select the zone to be unpaired.

'nO' will appear on the screen.

Rotate  clockwise.

'YES' will appear on the screen.

Press  to confirm disconnection.


Press  to exit to the home screen.

Visit [Plumb2u](http://Plumb2u.com)



See product

## Open Window Function


Enabling this feature will stop the zone from operating if the eTRV detects a drop in temperature of over 1.5°C within 3 minutes.

When this is detected the eTRV will display the open window symbol  and will stop reading temperature. That zone will be prevented from turning on even if it falls below it's setpoint.

The open window function will disable if the temperature rises by 0.5°C within 3 minutes or if the temperature stays low for more than 15 minutes.

Press and hold  and  for 5 seconds.

'**OFF**' will appear on the screen.

Press  until '**On**' appears on the screen.

Press  to select.

[Visit Plumb2u](#)



[See product](#)

## Menu

### P1 CAL - Calibrate

This function allows the user to calibrate the temperature reading of the eTRV.



It's strongly recommended that you should leave the eTRV for a minimum of 20 mins to acclimatise to the room temperature before calibrating. Do not hold the eTRV during this time as it can increase the temperature reading.


Press and hold  and  for 5 seconds.

'CAL' will appear on screen.

Press  to select.

The current actual temperature will appear on the screen.

Use  and  to adjust the temperature reading.

Press  to confirm and you will return to the menu.

Press  to exit at any point.

[Visit Plumb2u](#)



[See product](#)

## P2 Hi & Lo – Setting high & low limits




**OFF**


This function allows the user to change the minimum and maximum temperatures that the thermostat can be set to between 5...35°C.

Press and hold  and  for 5 seconds.

**'CAL'** will appear on the screen.



Press  until **'Lin'** appears on the screen.

Press  to select.

Press  to select ON.


Press  to confirm.


**'Hi'** will appear on the screen & the temperature will flash.

Use  and  to select the high limit.


Press  to confirm,

**'Lo'** will appear on the screen & the temperature will flash.

Use  and  to select the low limit.

Press  to confirm and you

**Visit Plumb2u**



Press  to exit at any point.

**'LIM'** will appear on the screen


**See product**

## P3 rSt – Resetting the eTRV

This function allows the user to reset the eTRV to its factory default settings.


Press and hold  and  for 5 seconds.

'CAL' will appear on the screen.


Press  until 'rSt' appears on the screen.

Press  to select.

'nO' will flash on the screen.

Use  to adjust.

'YES' will flash on the screen.

Press  to confirm.

The eTRV will now reset and will go to the OFF mode.

Press  to change between Manual, Auto and OFF.

[Visit Plumb2u](#)

[See product](#)

## P4 bL – Backlight Auto

This function allows the user to select the backlight to be OFF or Auto.

**Auto** - this allows the backlight to activate for 5 seconds when a button is pressed.

**OFF** - the backlight is permanently off.



Press and hold  and  for 5 seconds.


'**CAL**' will appear on the screen.

Press  until '**bl**' appears on the screen.

Press  to select.

'**AUt**' will display on the screen.

Use  and  to adjust between Auto and OFF.

Press  to confirm and you will return to the menu.

Press  to exit at any point.

[Visit Plumb2u](#)


[See product](#)

## P5 InS – Installation Direction Vertical

It is important to select the correct setting for the ETRV if it is mounted on a radiator in the vertical or horizontal position. The installation direction changes how the eTRV senses temperature.



Press and hold  and  for 5 seconds.

**'CAL'** will appear on the screen.

Press  until **'InS'** appears on the screen.


Press  to select.

**'ud'** will display on the screen.

Use  and  to adjust to the correct setting.

**'ud'** - Vertical Direction.

**'Hd'** - Horizontal Direction.

Press  to confirm and you will return to the menu.

Press  to exit at any point.

[Visit Plumb2u](#)


[See product](#)

## P6 HOn - Hysteresis HOn 0.4°C & HOF 0.0°C


This menu allows the installer to change the switching differential when the temperature is rising and falling.

If 'H ON' is set at 0.4°C and the setpoint is 20°C, then the thermostat will turn on when the temperature drops below 19.6°C.

If 'H OF' is set at 0.2°C and the setpoint is 20°C, then the thermostat will turn off when the temperature reaches 20.2°C.



Press and hold  and  for 5 seconds.

'CAL' will appear on the screen.

Press  until 'HOn' appears on the screen.

Press  to select.


'On' temperature will begin to flash.

Use  and  to adjust the HOn temperature.

Press  to confirm.

'OF' temperature will begin to flash.

Use  and  to adjust

Press  to confirm and you will return to the menu.

Press  to exit at any point.

**Visit Plumb2u**

**See product**

## EPH Controls IE

technical@ephcontrols.com  
www.ephcontrols.com/contact-us  
+353 21 471 8440  
Cork, T12 W665



## EPH Controls UK

technical@ephcontrols.co.uk  
www.ephcontrols.co.uk/contact-us  
+44 1933 322 072  
Harrow, HA1 1BD



Visit **Plumb2u**

**EP** See product  
CONTROLS